

MES 1001 UV Light Source replacement guide

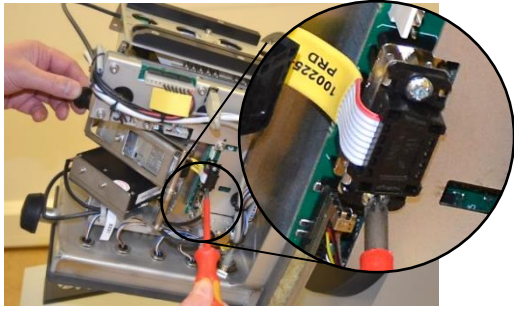
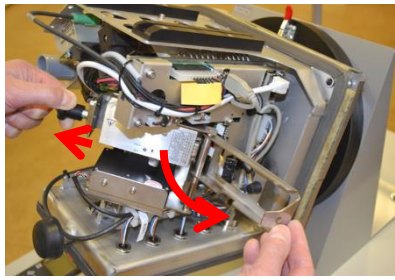
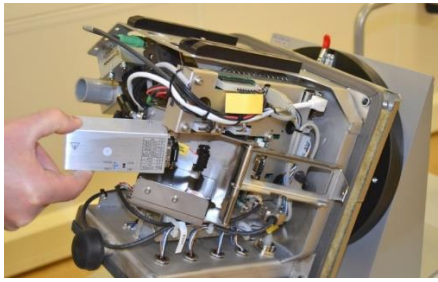
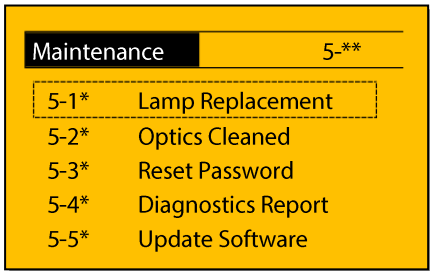
Document no.: 101456-MAN

Revision: A

Revision date: 2022-09



Step-by-step video instruction is available. Use QR code or find link at <https://danfoss-ixa.com/services-and-support>

1 Turn off sensor on power switch	2 Remove cabinet by removing the four cabinet bolts and sliding cabinet away from probe.
3 Unscrew and disconnect cable at PCB 	4 Release and open the cover for the UV Light Source by pulling the latch 
5 Remove the UV Light Source and disconnect cable 	6 Connect cable to new UV Light Source and install it in the sensor.
7 Close the cover for the UV Light Source and reconnect the cable to the PCB.	8 Remount cabinet and cabinet bolts. Turn on sensor
9 On display, press Menu, go to 5-** Maintenance and 5-1* Lamp Replacement, and press OK to confirm lamp replacement 	

NOTICE In case of issues with UV Light Source replacement:

1 See instruction video. Find via QR at the top or find link at https://danfoss-ixa.com/services-and-support	2 For further support, contact Danfoss IXA Service & Support at ixa.service@danfoss.com
--	---