	1	2		3	4	5	6
А	 Installation notes. 2.1 Please install Ana 2.2 Connect cable sh 2.3 Compressed air t 3. Safety notes. 	alyzer as late as possible in the ield to ground pin at the Ana	ne install lyzer end n from th	ation process to enside only. The top of the ship's p	neumatic supply tube to avoi	condensate in the	e Analyzer.
В		ARNING Read Operators Manual before operating		Li th	RNING tra Violet ght behind is cover ly open cover with wer turned off	air n conn	pressed nust be nected and surized at

3

2


D

Е

F

1

					Projection	Scale	9
	-						
	Mrl	k	Approval/Rev	Date	Ð	nho	ł
	Rei	place			A	uge.	~
	De	sign	тот	25.09.2023		_	
	App	proval	KJW	21.11.2023	Danfos	s IXA /	A/S
	ove	er to,	copied or used b	y third party.	/S. Not to be han Two- or three dim ed by Danfoss IXA	ensional	
4		5			6		
	8	i					

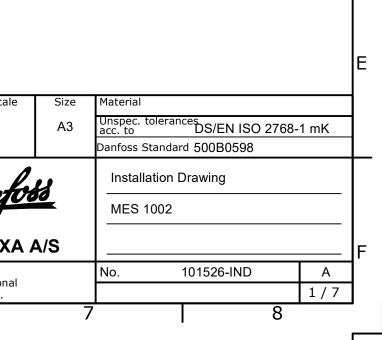

A

В

С

D

L

8

7

MES 1002 mass: 32 kg

Description

stack wall:

Clearance from stack to circular flange to

Flange surface to be parallel with stack

Measuring chamber center distance to

ensure room for bolts & nuts: CoG distance from flange:

Flange mounting position:

Measuring chamber length:

Item

А

В

C

D

1

		923		
	524	┍┥╺┥	<u>28</u> φ25	
Ø250 Ø188 Ø126				784
	(1:8)	20	3 35	

Δ

\square	G Distance from flange to Measuring 318 mm
	Yard Scope Relative to stack CoG CoG CoG
E	Stack wall
F	CoG

2

Dim.

80 mm

+/- 2°

150 mm


250 mm


22.5° +/- 5°

30 mm +/- 2 mm

3

4

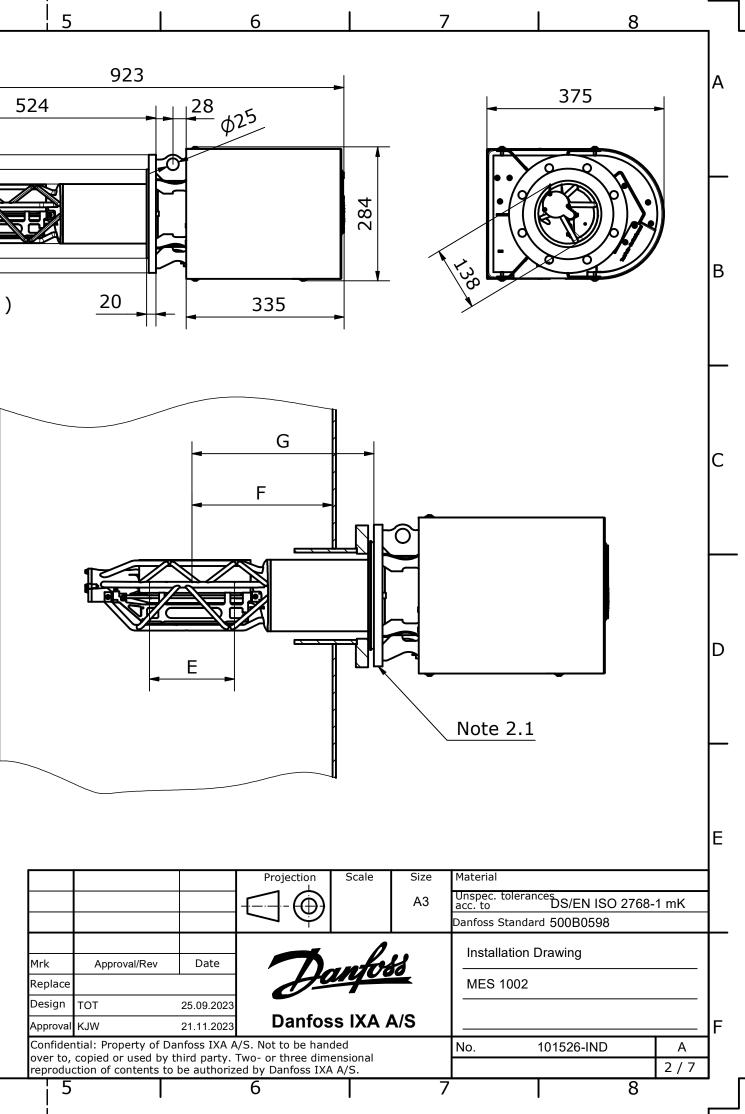

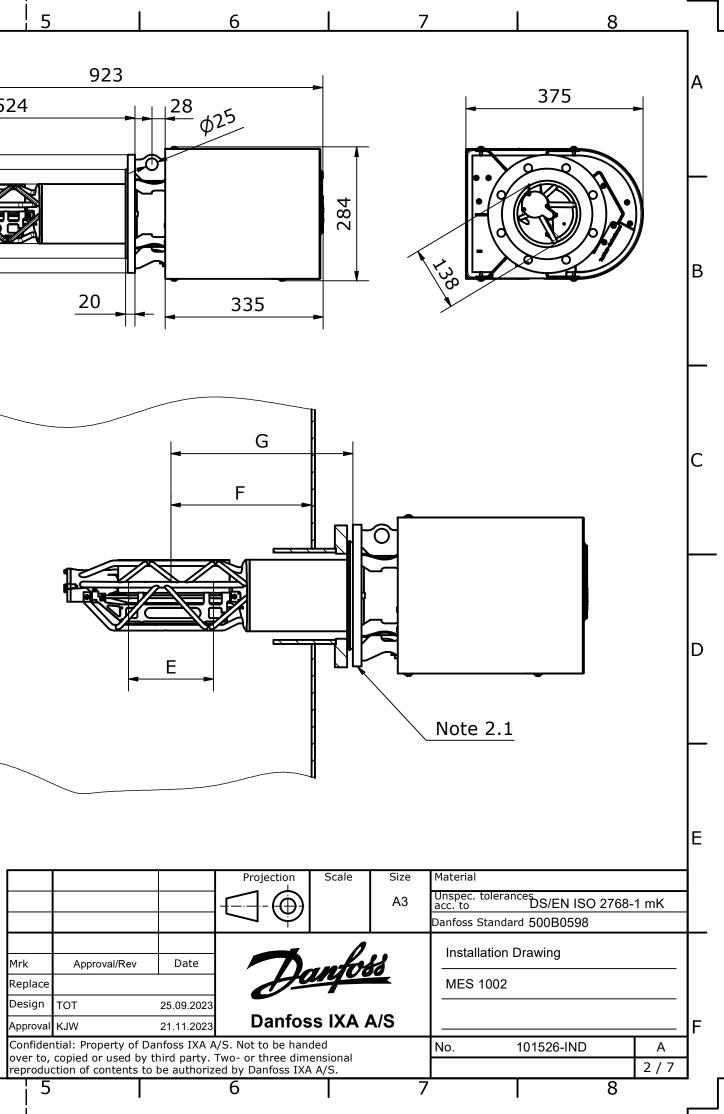

В

A

